



**MIAL<sup>®</sup>**  
**INSTRUMENTS PVT.LTD.**  
*Measuring & Beyond*

# **MUF 1200 (1%)** **MUF(B) 1200 (1%)**

CLAMP ON ULTRASONIC  
FLOW/BTU METER



| Measuring & Beyond



[www.mialinstruments.com](http://www.mialinstruments.com)

# MUF 1200 (1%)



## Clamp on Ultrasonic Flow/BTU Meter

### DESCRIPTION

#### Flow Meter/BTU Meter:

Introducing the MUF 1200/MUF(B) 1200 Clamp on Transit Time Ultrasonic Flow/Btu Meter, a cutting-edge solution for accurate and non-intrusive measurement needs. Leveraging transit-time technology, this meter ensures precise readings without the need for invasive installation procedures.

Its Clamp on design adds versatility to its application, catering to various setups and environments with ease. With the capability to measure both flow and thermal energy (BTU), it offers comprehensive insights into fluid dynamics and energy consumption within facilities. The MUF 1200/MUF(B) 1200 is the epitome of convenience and efficiency, providing users with reliable data for informed decision-making and effective maintenance strategies.

### CALIBRATION

Each MUF 1200 / MUF(B) 1200 meters undergoes meticulous wet calibration in our state-of-the-art flow laboratory, tailored to the specific pipe size and on-site application requirements. Accompanying every meter is a comprehensive certificate of calibration and detailed test report, ensuring precision and reliability in measurement

### APPLICATIONS

#### HVAC Application:

The MUF 1200/MUF(B) 1200 Clamp on Transit Time Ultrasonic Flow/Btu Meter offers unparalleled functionality in HVAC applications. Whether it's monitoring the flow of chilled water in air conditioning systems or assessing the thermal energy consumption of heating systems, this meter excels. Its non-invasive installation process and accurate measurements make it an ideal choice for HVAC maintenance and optimization tasks.

#### Replacement of Defective Devices:

In scenarios requiring the replacement of defective flow and energy measurement devices, the MUF 1200/MUF(B) 1200 Clamp on Transit Time Ultrasonic Flow/Btu Meter stands out as the ideal solution. Its versatility and ease of installation enable swift replacement without disrupting existing infrastructure. By seamlessly integrating into the system, it ensures uninterrupted monitoring and precise measurements.

#### Ease of installation:

The MUF 1200/MUF(B) 1200 Clamp-on Transit Time Ultrasonic Flow/Btu Meter is well-suited for scenarios requiring accurate flow measurement, offering seamless integration without requiring modifications to existing piping arrangements or system downtime.

#### Performance and Efficiency Management:

For assessing the performance and efficiency of fluid systems, the MUF 1200/MUF(B) 1200 Clamp on Transit Time Ultrasonic Flow/Btu Meter delivers unmatched accuracy. Whether it's evaluating the effectiveness of pumps or monitoring regulating valves, this meter provides comprehensive insights. Its ability to measure both flow and thermal energy facilitates thorough performance assessments, enabling proactive maintenance and optimization strategies.



MUF 1200 (1%) Clamp on Ultrasonic Meter

## FEATURES

### Wide Liquid Temperature:

With a wide liquid temperature range, the MUF 1200/MUF (B) 1200 Clamp on Transit Time Ultrasonic Flow/Btu Meter is capable of accurately measuring flows across various temperature conditions. This meter maintains its precision, providing reliable data for monitoring and control purposes. Its versatility ensures consistent performance across a broad spectrum of operating temperatures.

### Digital Communication Interfaces:

Mial clamp-on ultrasonic flow meters come with Modbus digital communication interfaces, making them easy to connect to control systems. This allows for smooth data transfer and better compatibility, ensuring they work well in industrial environments.

### Thermal Energy Measurement Capability:

Equipped with thermal energy measurement capability, the MUF(B) 1200 Clamp on Transit Time Ultrasonic Btu Meter offers a complete solution for energy monitoring and management. Beyond flow rate measurement, it accurately quantifies thermal energy consumption, allowing for thorough analysis of heating and cooling systems' efficiency. This capability enhances its utility in energy audits and optimization efforts.

### Versatility Across Pipe Materials and Diameters:

Designed to accommodate different pipe materials and diameters ranging from 25mm to 1200mm, the MUF 1200/MUF(B) 1200 Clamp on Transit Time Ultrasonic Flow/Btu Meter offers unmatched versatility. Whether installed on metallic or non-metallic, and regardless of pipe size, this meter delivers consistent and accurate measurements. Its broad applicability makes it a go-to solution for diverse industrial and commercial fluid measurement needs.

### Very wide flow range capability

This device can accurately measure flow rates ranging from an extremely low  $+0.03\text{m/s}$  to a substantial  $\pm 5\text{m/s}$ , catering to a diverse array of flow conditions. Its wide range capability ensures reliable performance across various fluid velocities, offering versatility in applications.

## BENEFITS OF FLOW METER

- Easy installation with clamp-on transducers, reducing time and cost associated with installation procedures.
- Wide liquid temperature range ensures accurate measurements across varying operating conditions.
- Bi-directional flow measurement capacity
- Thermal energy measurement capability provides a complete solution for energy monitoring and management.
- Versatility across pipe materials and diameters (25mm to 1200mm) offers flexibility and applicability to diverse industrial settings.
- Elimination of pipe cutting or system shutdowns minimizes disruptions to operations, maximizing productivity and efficiency.

# MUF 1200 specifications\*

## Operation and performance

### Flow measurement

Ultrasonic differential transit-time Technology

### Fluid types

Water

### Fluid properties

Clean liquids in full (pressurized) pipes

### Pipe sizes

25 MM – 1200 MM

### Pipe materials

metallic and non-metallic materials.

### Flow Range

$\pm 0.09\text{ft/s} \sim \pm 16\text{ft/s}$  ( $\pm 0.03\text{m/s} \sim \pm 5\text{m/s}$ )

### Flow accuracy (velocity)

$\pm 1\%$  of the measured Value

*Achievable with process calibration*

### Repeatability

$\pm 0.2\%$  of the measured value

### Linearity

$\pm 1\%$

### Measurement parameters

Flow Meter– Instantaneous flow, totalized flow

Btu meter – Instantaneous energy, totalized energy, Instantaneous flow, totalized flow, supply temperature and return temperature.

### Certification

Calibration certification, CE, ISO

## Electronics

### Enclosures

ABS

*Wall mounted enclosure*

### Enclosure IP rating

IP65

### Memory

EEPROM

### Power supply

24 VDC/2A

*Use 2-amp SMPS when employing AC power*

### Ambient temperature

32°F to 140°F ( 0°C to 60°C)

### Humidity

Up to 99% RH, non-condensing

### Standard output

Analog output : 4 to 20 mA ,750  $\Omega$  maximum load

Pulse output– 0~10KHz

Alarm Relay output

### Network Connection

Modbus RTU RS 485

### Cable

30ft (9m)

## Flow Transducer

### Operating Temperature range (Fluid)

Standard: 5°F to 140°F (–15°C to 60°C)

Optional: 5°F to 266°F (–15°C to 130°C)

### Process connections

Clamp on/Strap on

### Materials

Transducer:ABS

### IP rating

IP68

### Meter installation orientation

Horizontal or Vertical

*In a vertical installation, it is essential that the pipe be fully filled, with the flow direction oriented from bottom to top.*

## Energy measurement

### Temperature sensor

PT1000

Standard: –4°F to 176°F (–20°C to 80°C)


Optional: –40°F to 356°F (–40°C to 180°C)

### Mountings


Clamp on/Strap on

*\*Specifications are subject to change without prior notice.*

# INSTALLATION DIAGRAM

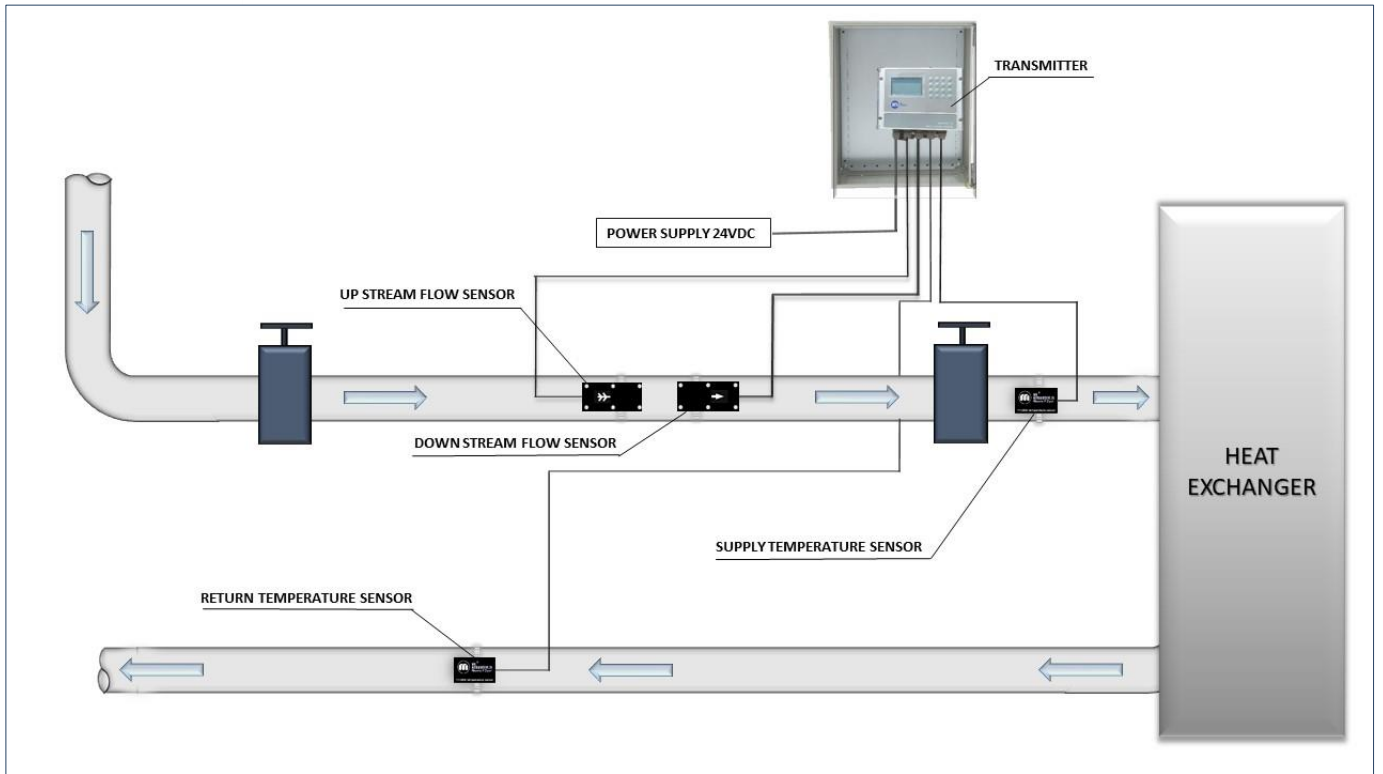

**MUF(B) 1200 (1%) BTU METER**

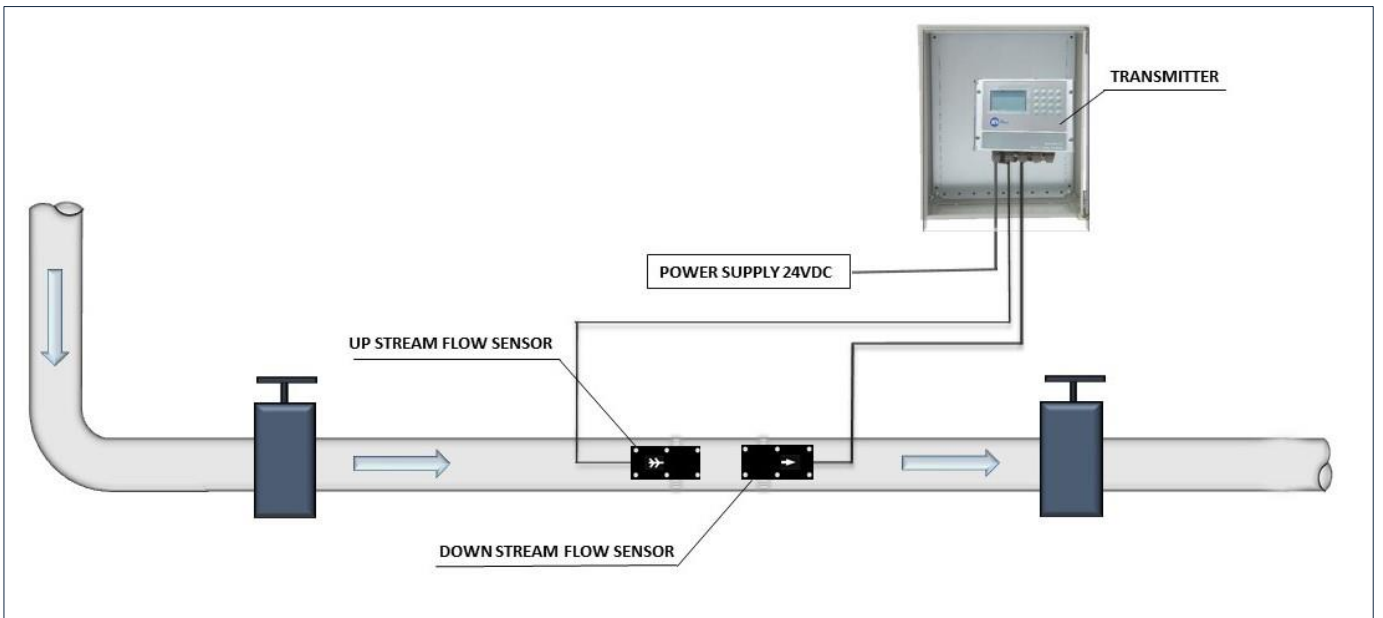

**MUF 1200 (1%) Flow METER**

## ORDERING CODE

### Meter Model Coding = MUF 1200 (1%) / MUF(B) 1200 (1%)-BB-CDE-FGH

#### Model

MUF 1200 (1%) = Mial Clamp On Ultrasonic Flow Meter

MUF(B) 1200 (1%) = Mial Clamp On Ultrasonic BTU Meter

#### E = Input Power

1 = 24 VDC

#### TRANSDUCER CONFIGURATION INFORMATION

##### BB= Pipe Size

01 = 1"

15 = 1.5"

02 = 2"

25 = 2.5"

03 = 3"

04 = 4"

05 = 5"

06 = 6"

08 = 8"

10 = 10"

nn = meter size, 12" - 48"

#### TRANSMITTER CONFIGURATION INFORMATION

##### F = Signal Output

1 = OCT, Relay, RS 485 (Modbus), 4-20 mA

2 = OCT, Relay, RS 485 (Modbus), 0-4-20 mA

##### G = Flow Direction

1 = Unidirectional

2 = Bidirectional

##### C = Transducer Cable Length

1 = 9m

##### H = Temperature Sensor Selection

1 = clamp on temperature sensor

2 = immersion temperature sensor

##### D = Process Connection

1 = Clamp On

*All future orders will adhere to the standard specifications outlined in the order code, ensuring consistency and quality across items*



**MIAL**®  
**INSTRUMENTS PVT.LTD.**  
*Measuring & Beyond*

USA OFFICE ADDRESS : MIAL INSTRUMENTS PVT LTD DOWNTOWN REPUBLIC CENTER , 325 N. ST.PAUL STREET, SUITE 3100,DALLAS 75201 ,TEXAS ,USA

FACTORY ADDRESS : MIAL INSTRUMENTS PVT LTD 856/6 GIDC MAKARPURA,VADODARA - 390010, GUJARAT, INDIA

Mob : +91 9913449547 | +91 9913449548 e-mail :info@mialinstruments.com